



Packard Bell EasyNote TJ65-CU-030GE Battery Replacement

Replace the battery of your Packard Bell EasyNote TJ65-CU-030GE.



Written By: Jasmin



INTRODUCTION


The removal of the battery is one of the easiest tasks on the Packard Bell EasyNote TJ65-CU-030GE. It is strongly recommended to remove the battery before conducting repairs on the laptop. No tools are needed.

Step 1 — Battery

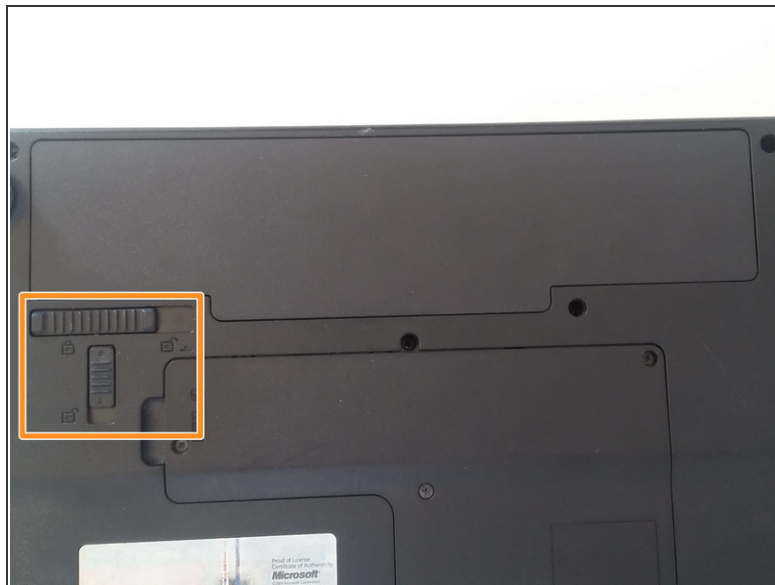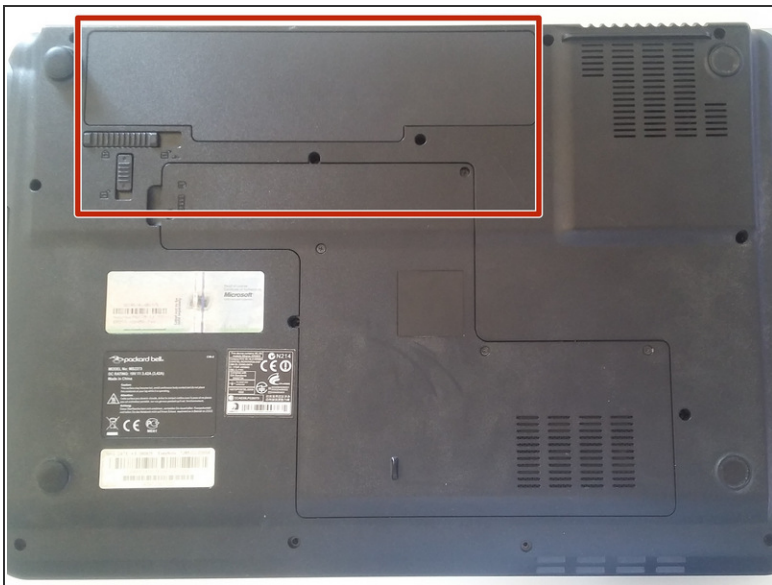

- The battery is located on the top left corner of the backside of the device.
- On the left side underneath the battery drawer, you can see two battery lock switches located in the shape of a T.
- ⓘ At the beginning, both switches should be switched to the locked position.

Step 2

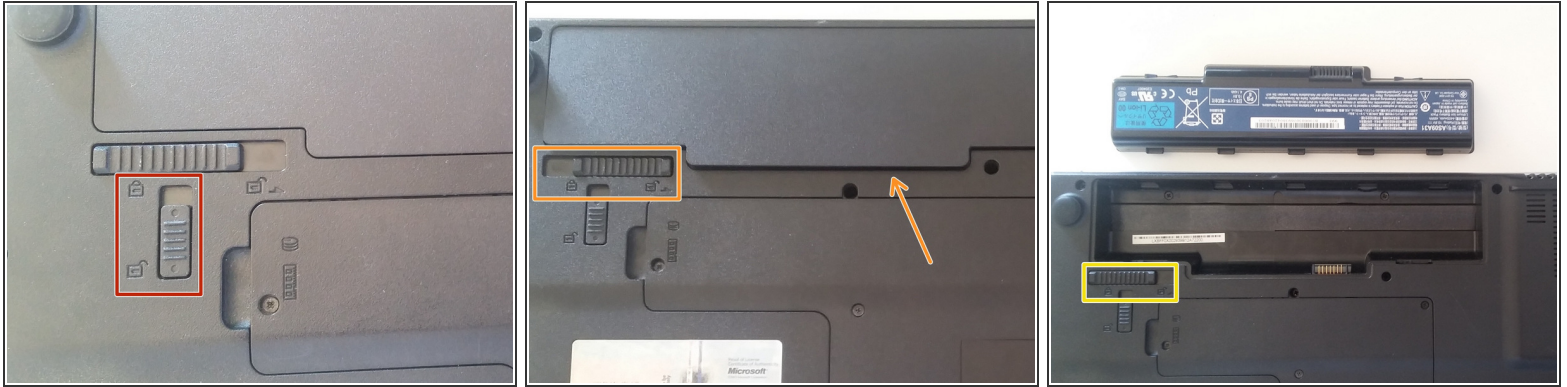

- Slide the vertical battery lock switch downwards to the image of the unlocked padlock.
- Now you can move the horizontal battery lock switch to the right.
 - ⓘ You need to apply some pressure to fully move over the switch. At the hardest part, the battery drawer will spring open.
- Now you can remove the battery block completely.
 - ⓘ By doing this, the horizontal switchlock will jump back to its original position on the left side.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 12:58:59 AM.